
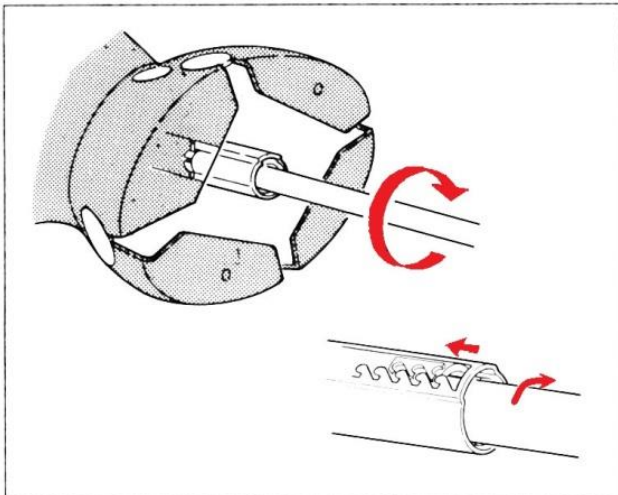


Preparing your dressform (Siera) for first use.

The first time you start using the dressform, you must assemble and adapt the dressform to your own measurements.


This is best done in the following way:

- Make a list of your own measurements : **chest (BW)**, **waist (TW)**, **hips (HW)**, **backlength (RL)** and **neckwidth**. Keep this list handy when you start assembling and adjusting.
- Remove all the items from the box.

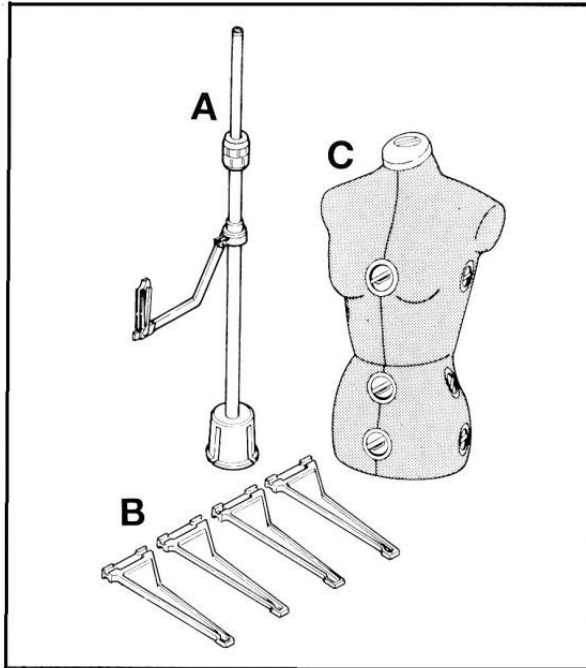


- Use the top of the telescopic rod A (see picture, you can see a cross) to adjust the backlength (RL) to its smallest/lowest position from the bottom (you can adjust to your own backlength later). To make this easy, lay the dressform down. As you can see on the pictures, you need to turn the telescopic rod clockwise while pushing upwards.



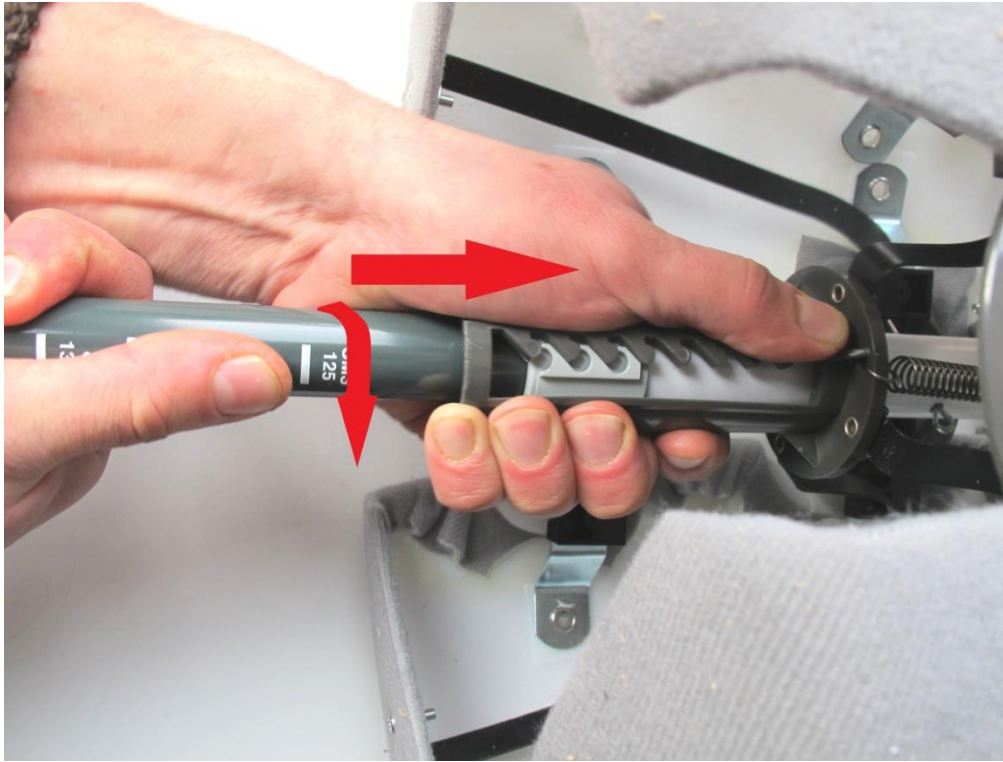


- Slide the 4 legs (B) to the support of the bottom of the telescopic rod. Slide if you wish the adjustable arm (F,G and H) for measuring the seamlength also on the telescopic rod before the telescopic rod is put in the support with the

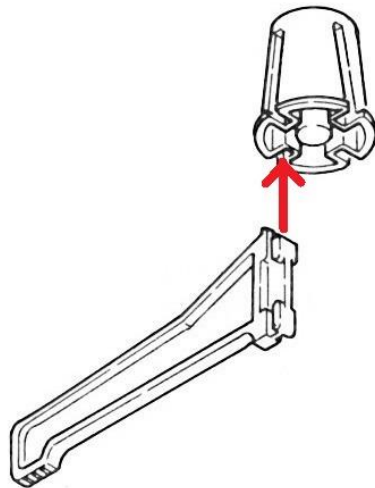

legs.


B

- Now turn the rod (no cross visible) in the base (I) and push it firmly. Turn adjusting screw E (see figure) firmly.
- Place the torso on the foot. The dressform is now assembled.

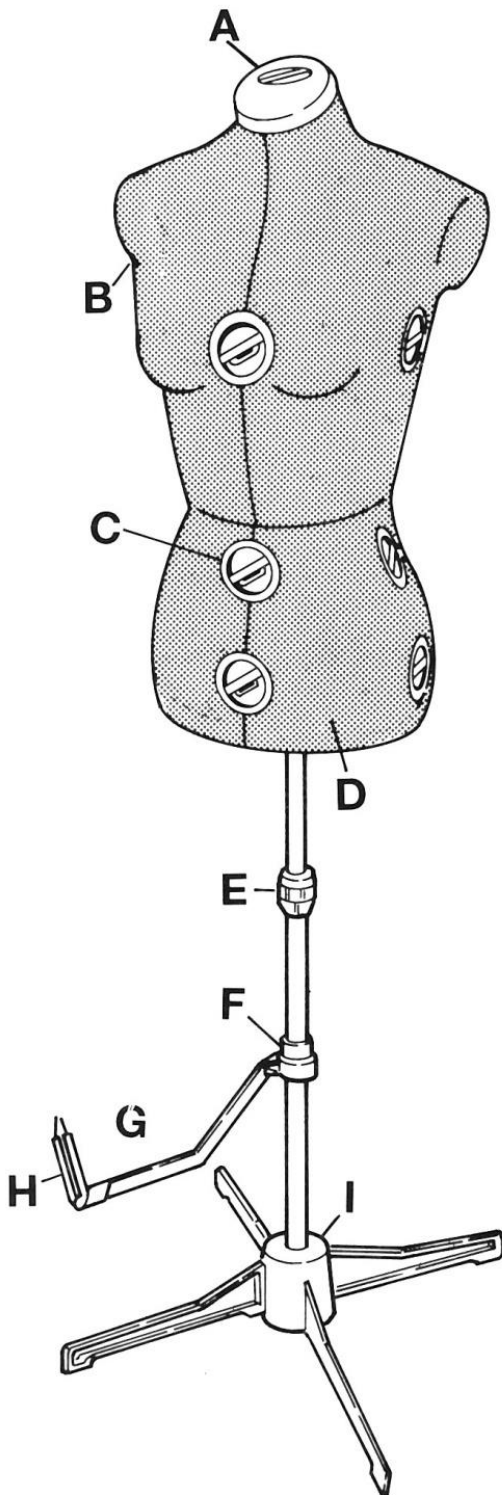

The rod is graduated. Adjust the height of the dressform so that shoulders are at the same height as yours. The number you can read (eg. 141) just above screw E, is the number that gives you the total backlength of the garment to the ground (minus 5 cm as a skirt never hangs on the ground). You can measure this total back length from the « protruding vertebrae » about 4 cm below the plastic band on the dressform.

Now you can adjust the knobs.

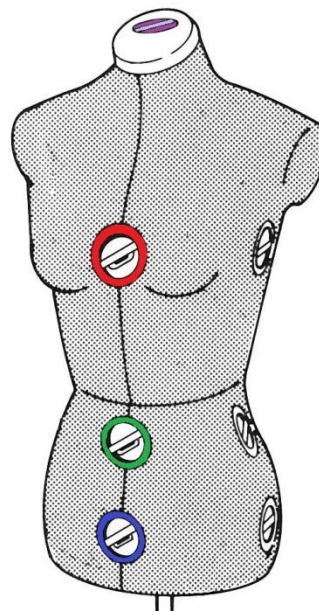



1. Start with the **center front BW** (red). Turn the knob clockwise, after you have pressed it. Go no further than halfway through the numbers. The (red) dot points straight up. When you release the knob you can feel a click, indicating the right position.
2. Adjust knob **TW centerfront** (green) .
3. As third, **HW centerfront** (blue).
4. Turn the dressform and adjust the knobs on the **back from top to bottom, centerback BW, centerback TW and centerback HW**. Don't go further than halfway through the numbers.
5. Now you can adjust the knobs on the **sides, from top to bottom** . Dont go further than halfway through the numbers.


Now all the knobs are set to halfway, you can adjust the knobs to your own size.

Adjust according steps 1 to 5 so all the knobs are in the right position cm or inch. On each knob you can see the total width, for example BW (96 cm).

Then set the knob on top of the dressform so that the **neck width** matches your size (purple).

Finally, measure the backlength **RL** of the dressform. Just as like a real person, measure from the neckline (where by humans you can feel a protruding vertebrae) to waistline. Use the telescopic rod to adjust the backlength if needed, like described in the first part of this manual.

On the next picture you can see the highest position. This way you get the maximum backlength.

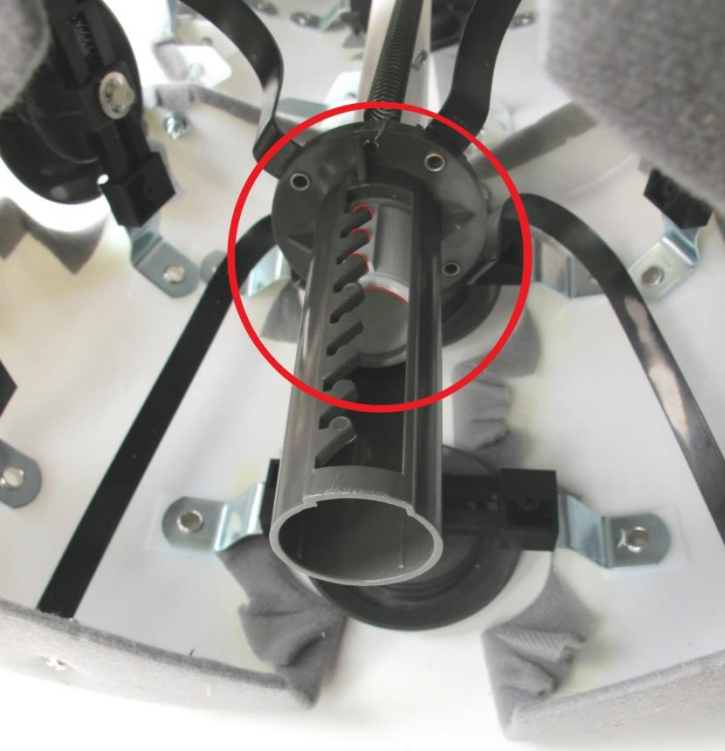

We hope you enjoy you dressform.

Matri.